

ISO 9001 - 2015

ISSN 2349 - 4891

Monthly



IF
4.665

Volume 4, Issue 6, June 2017

International Journal of
Recent Research and Applied Studies

SURRAGH PUBLICATIONS
SURRAGH PUBLICATIONS





Analysis of Structural Properties of Thermocool and Polyester Yarns

Divyansha Sharma & Dr. Chanchal

Institute of Home Economics, University of Delhi, New Delhi, India.

Received 10th may 2017, Accepted 5th June 2017

Abstract

Polyester fiber has taken the foremost position in textile all over the world. This material that has many uses like strength, light weight, resistance to shrinking, stretching, mildew, creasing and ultraviolet radiations but comes few drawbacks also that are causes wearer to get overheated and sweaty, gives the wearer a rather cheap and scruffy look, does not feel very nice on the skin & hydrophobic in nature. These drawbacks have been overcome by a new fibre named Thermocool which has introduced three developments using its thermo regulating, moisture-wicking Thermo°Cool™ technology. In this view, the purpose of this study is to understand the morphology of both the fibres using XRD & DSC test. The result showed no difference in XRD but difference was clearly seen in DSC test.

Keywords: Polyester, Thermocool, X-ray diffraction, Differential Scanning Calorimetry.

© Copy Right, IJRRAS, 2017. All Rights Reserved.

Introduction

The great appeals of textile lies in their comfort properties which are enhanced while create a fabric. The comfort properties of material depend upon the characteristic of the material, the way in which fibers are arranged and finishing techniques applied. Nowadays, people prefer the comfort properties of fabric over appearance. Among synthetic fibers, polyester fiber has taken the foremost position in textile all over the world, while synthetic clothing in general is perceived by many as having a less natural feel compared to fabrics woven from natural fibers. Polyester is the material that has many uses, but it also comes with quite a few drawbacks. Polyester fibre has some advantages like strength, light weight, resistance to shrinking, stretching, mildew, creasing and ultraviolet radiations. As far as polyester clothing goes, it gives the wearer a rather cheap and scruffy look. Polyester also does not allow air to travel through it very well, and this causes wearer to get overheated and sweaty. It does not feel very nice on the skin & also hydrophobic in nature. The orientation of polyester fiber shows higher percentage of crystallinity which requires higher temperature for dyeing. But higher temperature leads to fabric degradation most of the times. So it is important to improve the structure of polyester by some surface modification which can have an improved effect on hand, thermal properties, permeability and hydrophilicity.

Therefore, a surface modification has been done by the Netherlands-based polyester fibre manufacturer Advansa which has introduced three developments using its thermo regulating, moisture-wicking Thermo°Cool™ technology [Textile news 2010]. Thermo°Cool fibre have following benefits are evaporative cooling, knows when to keeps things cool and comfortable, thermo buffering, protects the user from temperature changes, comfortable, fabrics are fast-drying, breathable, and moisture wicking, renewable and biodegradable - Eco-friendly options are fabricated from corn, a renewable resource that is 100% biodegradable, plus all Thermo°Cool fibers are made from recycled polymers.

In few researches has done the modification to to overcome some drawbacks such as low moisture regain, static electricity and soiling problems, this three drawbacks are interrelated and associated with hydrophobicity of the polyester [Prince 2009]. Another research has been carried on surface modification of polyester fabric which states that Hydrolysis of polyester fabrics with sodium hydroxide has been studied with a view to imparting hydrophilicity and other comfort-related properties to polyester textiles. [Dave et al 2003].

Material & Methods

Yarns selected for the study were 100% polyester and 100% thermocool yarns.

XRD(X-ray Diffraction)

X-ray diffraction is an analytical technique looking at X-ray scattering from crystalline materials. % crystallinity of thermocool and polyester was calculated using this technique. Each material produces a unique X-ray "fingerprint" of X-ray intensity versus scattering angle that is characteristic of its crystalline atomic

Correspondence

Divyansha Sharma

E-mail: kvtsgr@gmail.com

structure. Qualitative analysis is possible by comparing the XRD pattern of an unknown material to a library of known patterns. [Kyawthetlatt 2014].

DSC (Differential scanning calorimetry)

Differential scanning calorimetry (DSC) is a

technique used to investigate the response of polymers to heating and to obtain the thermal critical points like melting point, enthalpy specific heat or glass transition temperature of substances. Melting point of both the yarns is analyzed by using this method.

Results and discussion

• X-ray Diffraction

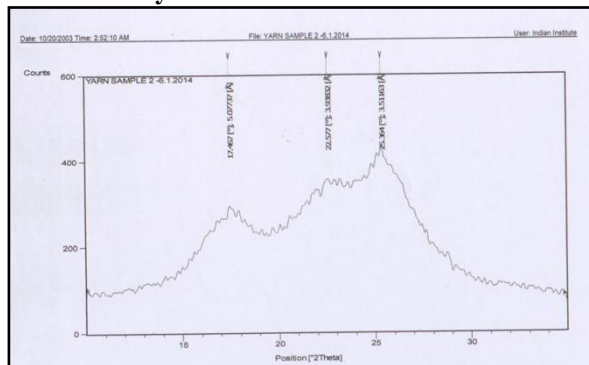


Figure I Thermocool

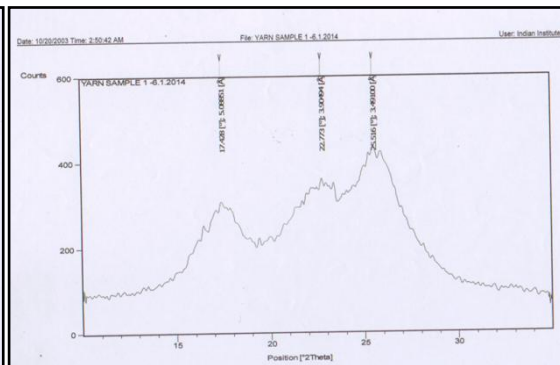


Figure II Polyester

After separation, total area of diffracted pattern is divided into crystalline component (Ac) amorphous component (Aa) of thermocool fiber.

As per the results of thermocool,

Ac = 66889

Aa = 83609

% of crystallinity (Xc%) was measured as ratio of crystalline area to total area.

$\% Xc = \frac{Ac}{(Aa+Ac)} \times 100$

= 44%.

As per the results of polyester fiber,

Ac = 66500

Aa = 85211

% of crystallinity Xc% was measured as ratio of crystalline area to total area.

$\% Xc = \frac{Ac}{(Aa+Ac)} \times 100$

= 44%

According to the calculation the % of crystallinity of thermocool and polyester yarns was 44%. This result shown in Figure 3.1 and 3.2, a thermocool and polyester yarn which has been used in the study has no difference in their % of crystalline and amorphous.

• Differential Scanning Calorimetry

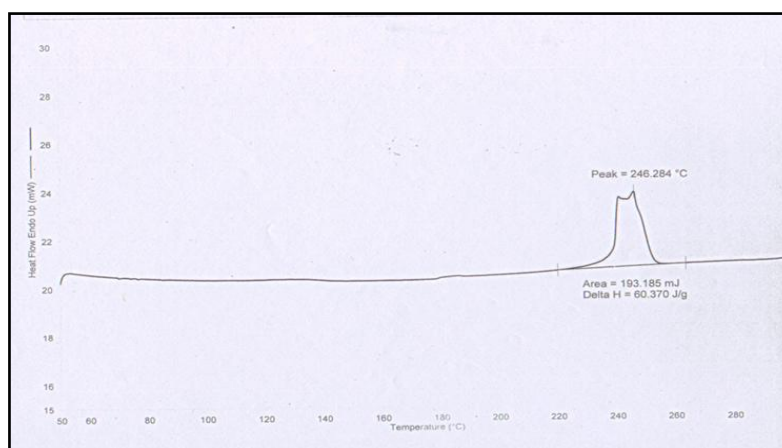


Figure III
Thermocool

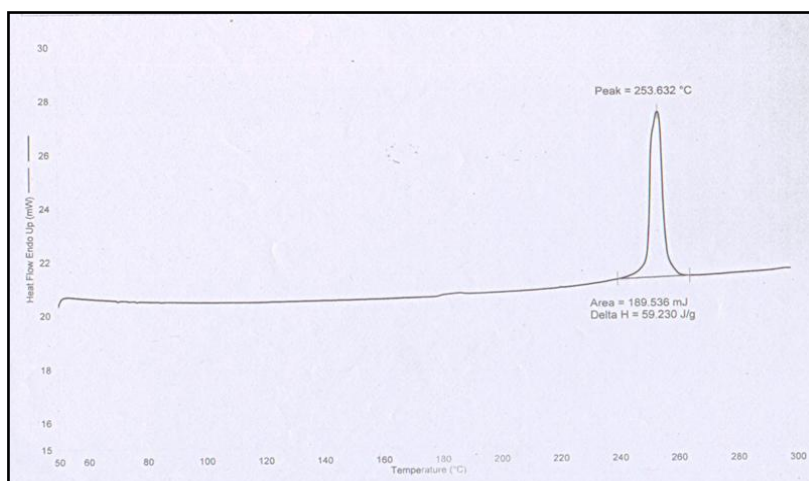


Figure IV
Polyester

From DSC analysis shown in Figure 3.3 and 3.4, it was observed that thermal degradation of thermocool started at 246°C, where as in case of polyester the thermal degradation began at 253°C. The difference in the degrees of thermal degradation of both the sample was 7°C. In general the bottle grade PET has a melting temperature (T_m) between 255 and 265°C which is a crystalline PET [Silva].

Conclusion

Morphological study was carried out of thermocool and polyester yarn by examining x-ray diffraction and differential scanning calorimetry. According to the results obtained for XRD, % crystallinity of thermocool and polyester was found to be the same. But in the analysis of DSC, difference in their melting points was seen which indicates thermal degradation of thermocool started at lower temperature

as compare to polyester yarn.

From the above results we could assume that some surface changes had occurred in the polymer structure of thermocool during its manufacturing which have multi-channel fibers that enable condensation to move quickly from the inside to the outside, improving the wearer's comfort and also retaining high insulation values owing to the combination of differently engineered cross sections in the fiber mix.

References

- Dave et al, "Modification Of Polyester Fabrics I: Alkaline Hydrolysis" text. Res. J (2003).
- Kyawthetlatt . "Material Characterization By X-Ray Diffraction (XRD)", 2014
- <http://www.itc.tu-bs.de/Abteilungen/Makro/Methods/dsc.pdf>.